


OYO / PINA LED / PIO DEMONTAGE- UND MONTAGEANLEITUNG für den Leuchtenkopf

Sicherheitshinweise, Schutzklassen und Instruktionen

⚠ Siehe Beiblatt M 1130

Demontage des Leuchtenkopfs


Die Kugel mit dem Daumen von der Oberseite des Leuchtenkopfs gegen die Unterseite des Leuchtenkopfs (LED) drücken.

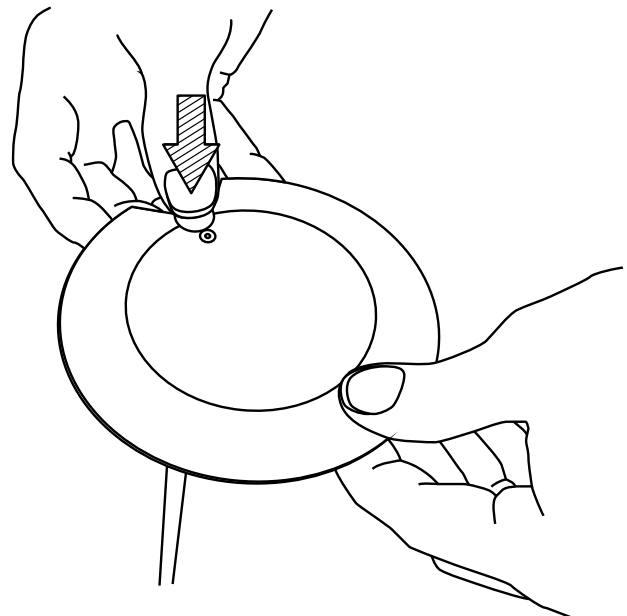

Montage des Leuchtenkopfs

Die Kugel mit dem Daumen von der Unterseite des Leuchtenkopfs (LED) gegen die Oberseite des Leuchtenkopfs drücken. Dabei kann die Oberseite auch auf einer gepolsterten Unterlagen abgestützt werden.

Magnetkontakt muss am Gestänge haften

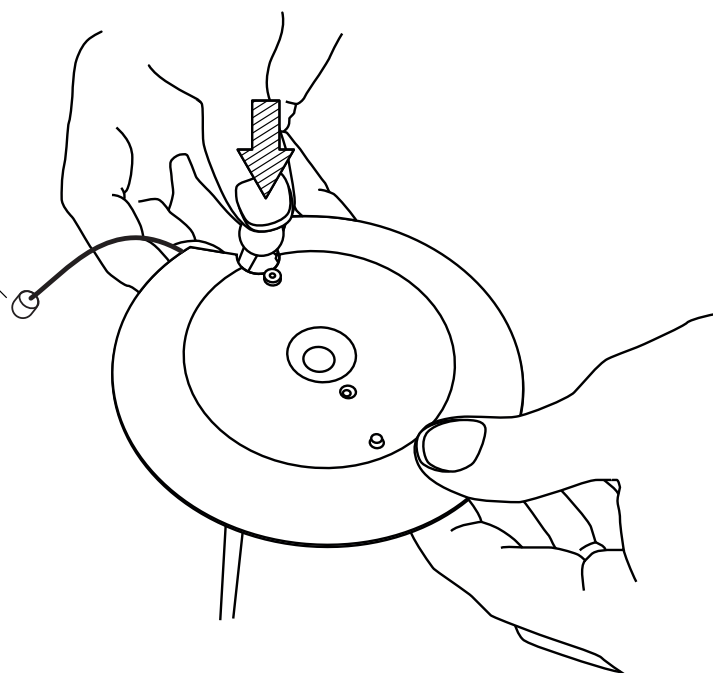


OYO / PINA LED / PIO DISASSEMBLY- AND ASSEMBLY INSTRUCTIONS for the luminaire head

Safety information, protection class and instructions

 See supplementary sheet M 1130

Disassembly of the luminaire head

Press the ball out of the luminaire head by pushing to the underside with the thumb.

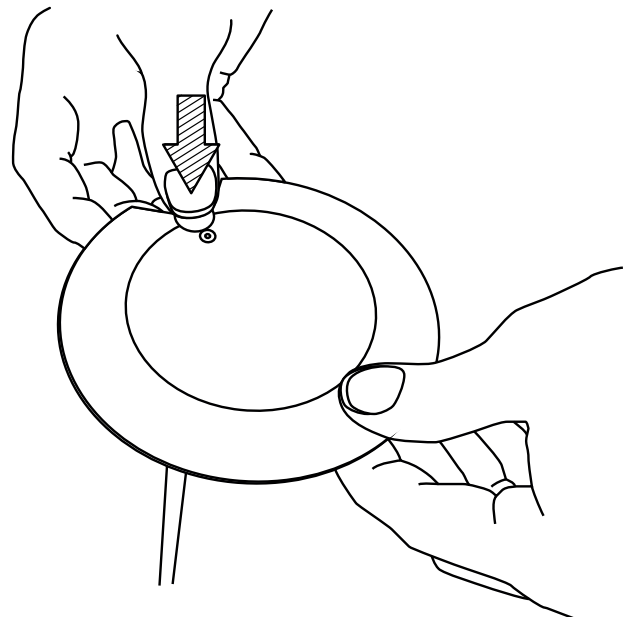

Assembly of the luminaire head

Press the ball into the luminaire head by pushing it from the underside to the topside with the thumb. The lamp head can be supported on a padded base.

